ACCESSORIES FOR SK / ES2 / SL SAFETY COUPLINGS

It is important that switches be 100% tested for proper functioning after mounting with safety coupling.


PROXIMITY SWITCH (E-STOP FUNCTION)



ES2

ORDER NUMBER 650.2703.001


TECHNICAL DATA	SK, ES2			
Voltage	10 to 30 V DC			
Max. output current	200 mA			
Max. switch frequency	800 Hz			
Temperature range	-25° to +70° C			
Protective system	IP 67			
Switch type	normally open			
Max. detection gap	max. 2 mm			
SWITCH DIAGRAM SK, ES2				
⊕	br + O			

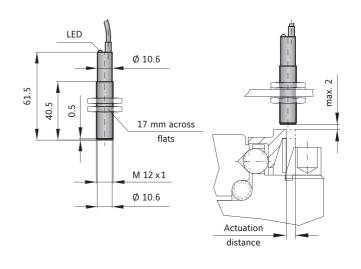

SL

ORDER NUMBER 619.4711.650

TECHNICAL DATA	SL			
Voltage	10 to 30 V DC			
Max. output current	200 mA			
Max. switch frequency	≤ 3 Khz			
Temperature range	rature range -25° to +70° C			
Protective system	ive system IP 67			
Switch type	PNP, NO			
Max. detection gap	max. 2 mm			
SWITCH DIAGRAM SL				
pnp	BN + BU -			

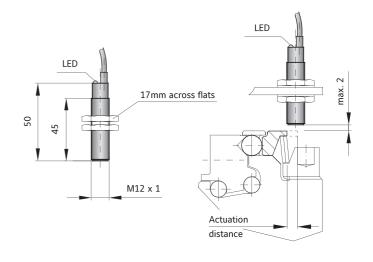

109

It is important that switches be 100% tested for proper functioning after mounting with safety coupling.

MECHANICAL LIMIT SWITCH (E-STOP FUNCTION)




ES

SL

ORDER NUMBER 618.6740.644

TECHNICAL DATA	SK, ES2, SL				
Max. voltage	250 V AC				
MAX. CONSTANT CURRENT:	2.5h A				
Protective system	IP 65				
Contact system	Opener (forced seperating)				
Temperature range	-30° to +80° C				
Actuation	Plunger (metal)				
SWITCH DIAGRAM SK, ES2, SL					
11 12					

The mechanical limit switch is suitable for size 30 and up. For smaller safety couplings the proximity sensor is recommended.

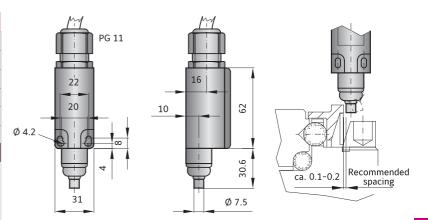

The switch plunger (pictured above and right) should be located as close to the actuation ring / limit switch plate as possible (approximately 0.1–0.2mm).

All data subject to change without notice.

ACCESSORIES FOR ATEX SAFETY COUPLINGS

It is important that switches be 100% tested for proper functioning after mounting with safety coupling.


ATEX PROXIMITY SWITCH (E-STOP FUNCTION)





ES2


ORDER NUMBER

EEX. 1624.004

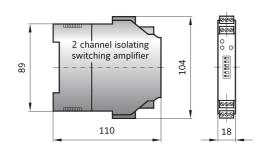

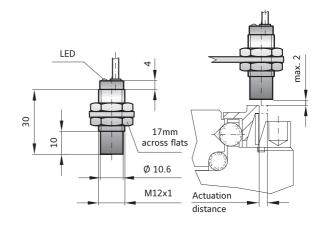

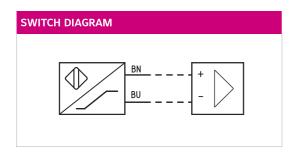

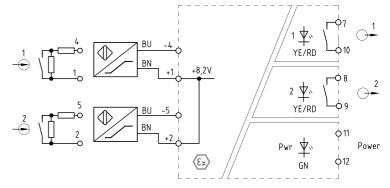

111

ACCESSORIES FOR SK/ES2/SL SAFETY COUPLINGS


R+W SPANNER WRENCH FOR TORQUE ADJUSTMENT

SK

ES2

SL

For smaller couplings the spanner wrench is not necessary. In sizes 1.5/2/4.5/10 the torque adjustment nut is easily turned with a screw or pin.

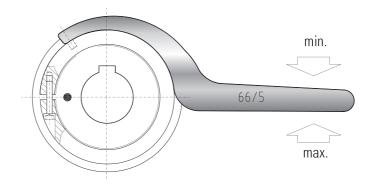

ORDER NUMBERS

COUPLING SIZE	SK Single postion Multi-position Load holding	SK Full disengagement	ES2 Single postion Multi-position Load holding	ES2 Full disengagement	SL Single postion Multi-position
15	49/4	49/4	-	-	-
20	-	-	55/4	55/4	-
30	55/4	55/4	-	-	55/4
60	66/5	66/5	66/5	66/5	66/5
80	82/5	82/5	-	-	-
150	82/5	82/5	82/5	82/5	82/5
200	90/6	98/5	-	-	-
300	114/6	114/6	114/6	114/6	100/6
450	-	-	126/8	126/8	-
500	126/8	126/8	-	-	-
800	134/8	144/8	134/8	144/8	-
1500	163/8	163/8	163/8	163/8	-
2500	210/10	226/10	-	-	-

All data subject to change without notice. RW-COUPLINGS.COM